Model: R8816P101C

PROGRAM TIME SWITCH WITH 14-DAY "SKIPPER®" MECHANISM WITH BAIN SENSOR CONNECTIONS.




FOR UP TO 60 OPERATIONS PER DAY

RELAY CONTACTS: DOUBLE POLE SINGLE THROW

30 AMP., 3 H.P. 240 VOLTS A.C. CLOCK MOTOR: 208/277 VOLTS - 60 HZ.



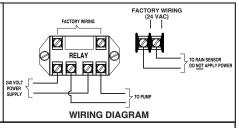

⚠ WARNING

Risk of Electrical Shock

Turn power off at main panel before servicing this switch or the equipment it controls. Use Copper wires only. Reinstall safety guard after wiring.

PROGRAMMING INSTRUCTIONS:

- TO SET FIRST ZONE: For watering, push gold pin into slot on yellow dial at desired ON time. For each 12 minutes of additional watering add one pin WITHOUT skipping a slot.
- 2. **TO CHANGE ZONES:** Leave one blank slot on yellow dial after ON line (gold pin), and valve will automatically advance to next zone.
- 3. TO SET ADDITIONAL ZONES: Repeat steps 1 and 2. REMEMBER to leave blank space between zones
- 4. **TO SET TIME OF DAY:** Turn yellow dial CLOCKWISE, until correct line is at end of silver time pointer. Do NOT turn silver pointer.
- 5. TO SKIP DAYS: Turn black skipper wheel COUNTER-CLOCKWISE until today's day is in front of "14" arrow. Press pins DOWN on days of NO watering. The skipper wheel must have all pins UP for daily watering. NOTE: The silver pin in dial advances this skipper wheel automatically. Do not use multiple silver pins.
- PUT SELECTOR SWITCH IN AUTO: This switch can be used to turn the system ON or OFF for manual operation without affecting the set program.
- 7. Move WATERING OPTION SWITCH to desired position.
 - TIMER ONLY: Pump turns ON when Timer is ON
 - TIMER & RAIN SENSOR: Pump turns ON when both Timer is ON and Rain Sensor is dry.

NOTE: Rain sensor (sold separately) must be the Normally Closed type. Follow The National Electrical Code and local code requirements when installing this time switch.

INTERMATIC INCORPORATED