

MODEL: T174

24 HOUR DIAL TIME SWITCH WITH "SKIPPER"[®]



UL
HOLOGRAM
LABEL

TYPE 1 INDOOR USE ONLY

DOUBLE POLE SINGLE THROW (DPST)

40 A RESISTIVE, PER POLE 120 - 480 VAC; 40 A INDUCTIVE,

TUNGSTEN OR 1000 VA PILOT DUTY PER POLE 120 - 277 VAC;

2 HP (24 FLA) - 120 VAC; 5 HP (28 FLA) - 240 VAC

16 A ELECTRONIC BALLAST, 277 VAC

⚠ WARNING Risk of Fire or Electric Shock

- Disconnect power at the circuit breaker(s) or disconnect switch(es) before installing or servicing.
- Installation and/or wiring must be in accordance with national and local electrical code requirements.
- Use wires rated at least 90°C - COPPER conductors ONLY.
- Replace plastic insulator covering terminals before powering ON.
- KEEP DOOR CLOSED AT ALL TIMES when not servicing.

⚠ AVERTISSEMENT Risque d'incendie ou de choc électrique


- Utiliser des fils classés 90 °C minimum - Conducteurs en CUIVRE UNIQUEMENT.

NOTICE

- Rotate timer dial clockwise only.
- Do not move the clock hands on the timer. Moving the clock hands can damage the timer.


CLOCK MOTOR: 208-277 VAC, 60 HZ.

CLOCK MOTOR VOLTAGE AND CYCLE MUST BE AS SPECIFIED. TO ORDER REPLACEMENT, INDICATE PART NO. (WG--) ON MOTOR COVER.

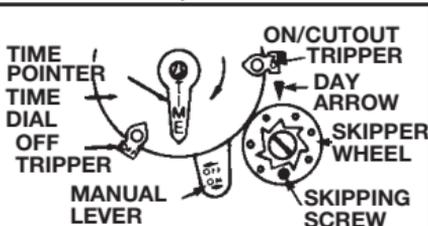

WIRING DIAGRAM


240V 2 WIRE AND GROUND

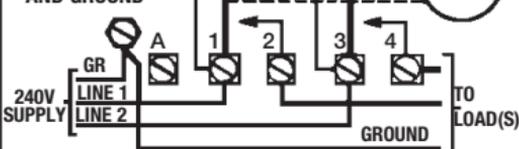

277/480 VOLT CONNECT MOTOR LEADS TO TERMINALS "A" AND 1 AND SUPPLY NEUTRAL TO TERMINAL "A".

WIRING INSTRUCTIONS: Remove 1/2 inch of insulation from wire ends. Tighten terminal screws firmly (2-18 in-lbs). Use solid or stranded COPPER conductors only. May use two wires of the same size and type.

MINIMUM COPPER WIRE SIZE (AWG)	MAX. LOAD (AMP)	MIN. INSULATION TEMP(°C)	75°C INSULATION MAX. MOTOR LOAD (HP)			
			SINGLE PHASE		3 PHASE	
			120 V.	240 V.	208 V.	240 V.
14	15	90	1/2	2		
12	20	90	1	2 1/2		
10	30	90	2	3	N/A	N/A
8	40	90	-	5		

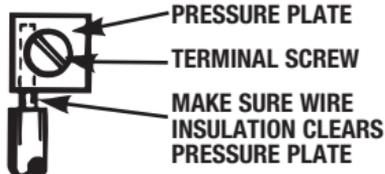

PROGRAMMING INSTRUCTIONS

1. TO SET "ON" AND "OFF" TIMES: Hold trippers against edge of CLOCK-DIAL, pointing to time (AM or PM) when ON and OFF operations are desired, tighten tripper screws firmly. For additional tripper pairs on CLOCK-DIAL order 156T1948A.
2. TO SET TIME-OF-DAY: Pull CLOCK-DIAL outward. Turn in either direction and align the exact time-of-day on the CLOCK-DIAL (the time now, when switch is being put into operation) to the pointer. DO NOT MOVE POINTER.
3. TO SKIP OPERATION(S) ON SELECTED DAY(S): Insert SKIPPING SCREW(S) in SKIPPER WHEEL for day(s) automatic operation(s) is/are NOT required. Tighten screws firmly. Move MANUAL LEVER to "OFF" and rotate SKIPPER WHEEL to locate correct day-of-week opposite DAY ARROW--"YESTERDAY" if ON/CUTOUT TRIPPER has not yet advanced wheel "TODAY" if it has.

OPERATING INSTRUCTIONS

- TO OPERATE SWITCH MANUALLY: Move MANUAL LEVER below CLOCK-DIAL left or right as indicated by arrows. This will not effect next operation. CAUTION: TO AVOID SLOW SWITCH ACTION FAILURE, DO NOT OPERATE SWITCH MANUALLY NOR PLACE A TRIPPER 4 HOURS PRIOR TO ON/CUTOUT TRIPPER SWITCHING.
- IN CASE OF POWER FAILURE, reset CLOCK-DIAL to proper time-of-day. See programming instructions.

INTERMATIC INCORPORATED

SPRING GROVE, ILLINOIS 60081-9698

154--02068