

MODEL: T175

24 HOUR DIAL TIME SWITCH

WITH "SKIPPER"® 1 NO - 1 NC CONTACTS

TYPE 1 INDOOR USE ONLY

MAY BE WIRED AS SINGLE POLE DOUBLE THROW (SPDT)

40 A RESISTIVE, INDUCTIVE, TUNGSTEN

OR 1000 VA PILOT DUTY PER POLE 120/280/277 VAC;

2 HP (24 FLA) - 120 VAC; 5 HP (28 FLA) - 240 VAC

16 A ELECTRONIC BALLAST, 277 VAC



UL
HOLOGRAM
LABEL

WARNING Risk of Fire or Electric Shock

- Disconnect power at the circuit breaker(s) or disconnect switch(es) before installing or servicing.
- Installation and/or wiring must be in accordance with national and local electrical code requirements.
- Use wires rated at least 90°C - COPPER conductors ONLY.
- Replace plastic insulator covering terminals before powering ON.
- KEEP DOOR CLOSED AT ALL TIMES when not servicing.

AVERTISSEMENT Risque d'incendie ou de choc électrique



- Utiliser des fils classés 90 °C minimum - Conducteurs en CUIVRE UNIQUEMENT.

NOTICE

- Rotate timer dial clockwise only.
- Do not move the clock hands on the timer. Moving the clock hands can damage the timer.


CLOCK MOTOR: 120 VAC, 60 HZ.

CLOCK MOTOR VOLTAGE AND CYCLE MUST BE AS SPECIFIED. TO ORDER REPLACEMENT, INDICATE PART NO. (WG--) ON MOTOR COVER.

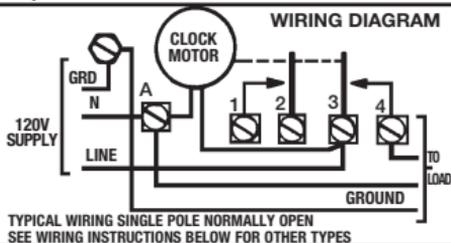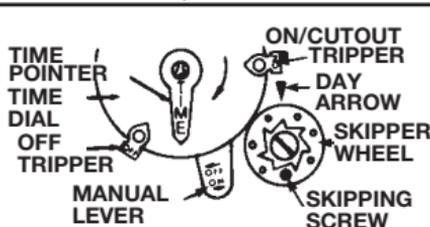

WIRING INSTRUCTIONS: Remove 1/2 inch of insulation from wire ends. Tighten terminal screws firmly (2-18 in-lbs). Use solid or stranded COPPER conductors only. May use two wires of the same size and type. To wire switch follow diagram above. To wire as SINGLE POLE NORMALLY CLOSED, move clock motor lead from terminal 3 to 1, and connect LINE to 1, LOAD to 2. To wire as SINGLE POLE DOUBLE THROW, install jumper (the same gauge as Line wire) between 2 and 3 and connect LINE to 2, LOADS to 1 and 4. NEUTRAL connection always as shown.

MINIMUM COPPER WIRE SIZE (AWG)	MAX. LOAD (AMP)	MIN. INSULATION TEMP(°C)	75°C INSULATION MAX. MOTOR LOAD (HP)			
			SINGLE PHASE		3 PHASE	
			120 V.	240 V.	208 V.	240 V.
14	15	90	1/2	2		
12	20	90	1	2 1/2	N/A	N/A
10	30	90	2	3		
8	40	90	-	5		

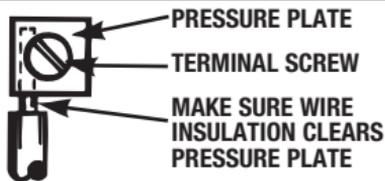

PROGRAMMING INSTRUCTIONS

1. TO SET "ON" AND "OFF" TIMES: Hold trippers against edge of CLOCK-DIAL, pointing to time (AM or PM) when ON and OFF operations are desired, tighten tripper screws firmly. For additional tripper pairs on CLOCK-DIAL order 156T1948A.
2. TO SET TIME-OF-DAY: Pull CLOCK-DIAL outward. Turn in either direction and align the exact time-of-day on the CLOCK-DIAL (the time now, when switch is being put into operation) to the pointer. DO NOT MOVE POINTER.
3. TO SKIP OPERATION(S) ON SELECTED DAY(S): Insert SKIPPING SCREW(S) in SKIPPER WHEEL for day(s) automatic operation(s) is/are NOT required. Tighten screws firmly. Move MANUAL LEVER to "OFF" and rotate SKIPPER WHEEL to locate correct day-of-week opposite DAY ARROW--"YESTERDAY" if ON/CUTOUT TRIPPER has not yet advanced wheel "TODAY" if it has.

OPERATING INSTRUCTIONS

- TO OPERATE SWITCH MANUALLY: Move MANUAL LEVER below CLOCK-DIAL left or right as indicated by arrows. This will not effect next operation. CAUTION: TO AVOID SLOW SWITCH ACTION FAILURE, DO NOT OPERATE SWITCH MANUALLY NOR PLACE A TRIPPER 4 HOURS PRIOR TO ON/CUTOUT TRIPPER SWITCHING.
- IN CASE OF POWER FAILURE, reset CLOCK-DIAL to proper time-of-day. See programming instructions.

INTERMATIC INCORPORATED

SPRING GROVE, ILLINOIS 60081-9698

154--02073