

## TIME SWITCH RATINGS:

**SINGLE POLE DOUBLE THROW (SPDT) - T106M**

**DOUBLE POLE SINGLE THROW (DPST) - T104M**

## TO WIRE:

1. Remove clock motor leads from **Terminals A and 3 of T106M** and connect to **Terminals 1 and 3 of T104M**. Connect **LINE 1** to **Terminal 1** and **LINE 2** to **Terminal 3 of T104M**.

2. Install jumpers between **Terminals 1 and 4 of T106M** and between **Terminal 2 of T104M and Terminal 1 of T106M**.

3. Connect **COMMON** of Two Speed Pump to **Terminal 4 of T104M**, **LOW** to **Terminal 2 of T106M** and **HIGH** to **Terminal 3 of T106M**.

If heater protection is required, install FIREMAN SWITCH On T104M Mechanism plate - order 156T4042A Switch kit separately.

## GROUND INSTALLATION.

### TO SET DAILY SCHEDULE:

1. Set **Time of Day** on both time switches by pulling then turning dials until the correct time of the day (AM or PM) lines up with pointer.

2. Place **ON** and **OFF** trippers on **T104M** dial at times when pump should **start** and **stop** operating.

3. Place **ON** trippers on **T106M** dial when pump should switch from **low to high** and **OFF** trippers when pump should switch from **high to low**.

Example:

**6 AM** - Turn **ON**, high speed. (Place **ON** tripper on T104M dial at 6 AM)

**9 AM** - Switch from **high to low** speed. (Place **OFF** tripper on T106M dial at 9 AM)


**3 PM** - Switch from **low** back to **high** speed.

(Place **ON** tripper on T106M dial at 3 PM)

**6 PM** - Turn **OFF**. (Place **OFF** tripper on T104M dial at 6 PM)

## OPERATING INSTRUCTIONS:

- **To Turn ON/OFF** Pump manually - move lever of T104M to ON/OFF.
- **To switch speed manually** while pump is operating - move lever of T106M to opposite position.
- **For more than one daily schedule** - place additional tripper pairs on dials.
- **In case of power failure** - reset both dials to proper time of day - see Step 1 above.

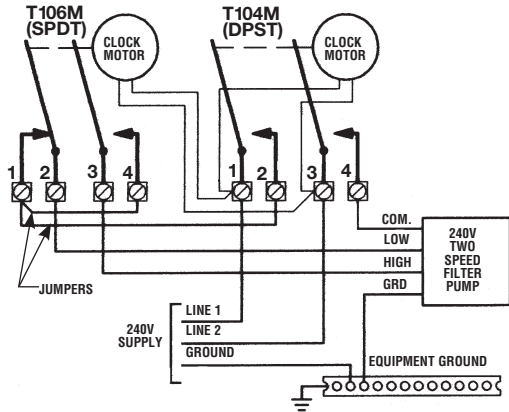

**INTERMATIC INCORPORATED**  
SPRING GROVE, ILLINOIS 60081-9698

158TP12266