

INSTALLATION INSTRUCTIONS

FOR JUNO TL SERIES FIXTURES

1. Insert adapter contacts into JUNO TL series Trac channel (Figure A).
2. Rotate adapter 90° in either direction until latch "snaps" into Trac channel (Figures B & C).
3. If fixture repositioning is necessary, slide (depress) latch out of Trac channel and rotate adapter free. Reposition and repeat step 2.
4. Adjust fixture aiming angles(s) as needed. DO NOT force.

