

# INSTRUCTIONS

## 5"/6" Recessed Retrofit



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: [marketing@rablighting.com](mailto:marketing@rablighting.com)



R6R88XX120WS R6R118XX120WS R6R148XX120WS  
R6R89XX120WS R6R119XX120WS R6R149XX120WS

R6R88XX120WB R6R118XX120WB R6R148XX120WB  
R6R89XX120WB R6R119XX120WB R6R149XX120WB

### IMPORTANT


#### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


#### WARNINGS:

- Risk of electrical shock. Disconnect power at fuse or circuit breaker before installing or servicing.
- To prevent early lamp failure, lamp should only be installed in operating environments ranging between  $-30^{\circ}\text{C}$  and  $+40^{\circ}\text{C}$  ( $-22^{\circ}\text{F}$  and  $+104^{\circ}\text{F}$ ).
- No user serviceable parts inside. To avoid electrical shock do not disassemble product.
- Risk of fire or electric shock, LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.
- Risk of fire or electric shock, Install this kit only in luminaires that have the construction features and min dimensions shown in the Figure 1 and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Installers should not disconnect existing wires from lampholder terminals to make new connections at lampholder terminals, Instead installers should cut existing lampholder leads away from the lampholder and make new electrical connections to lampholder lead wires by employing applicable connectors.
- This retrofit kit is accepted as a component of a luminaire where the suitability of the combination shall be determined by authorities having jurisdiction.
- This device is not intended for use with emergency exists.
- This retrofit kits suitable for wet locations luminaires specified as below: Type Non IC; Type IC; Covered ceiling; Uncovered ceiling.

### WHAT'S IN THE BOX

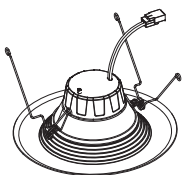

Downlight (1)

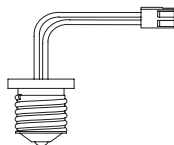

E26 Adaptor (1)




Lumi Sticker (1)

### TOOLS NEEDED

The Recessed LED Downlight is designed to fit into a 6" housing. No tools are necessary for installation.

### MIN. LUMINAIRE DIMENSION

Fig: 1

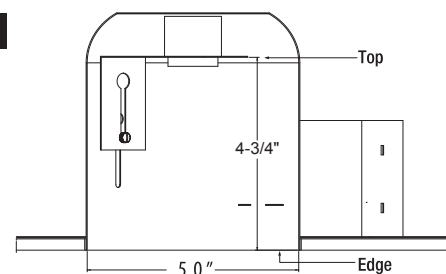

*Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.*

# INSTRUCTIONS

## 5"/6" Recessed Retrofit


# RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: [marketing@rablighting.com](mailto:marketing@rablighting.com)

### INSTALLATION INSTRUCTIONS


1. Make sure the power is turned off at the source to the recessed housing(s) that you are installing the fixture(s) in. Remove existing trim and CFL, or Incandescent bulbs.
2. Unscrew the screws on socket bracket, push bracket upward to the top location. (Fig. 2)

Fig: 2

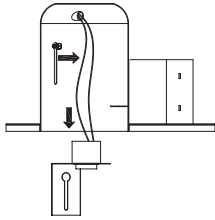


3. Remove existing socket mounting plate from the recessed housing and then remove lamp socket from the plate. (Fig. 3)

Fig: 3

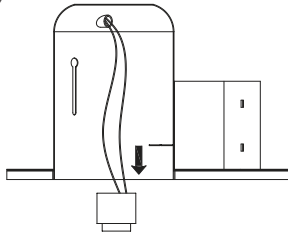


4. Screw the E26 adapter into the socket inside the housing. (Fig. 4)

Fig: 4

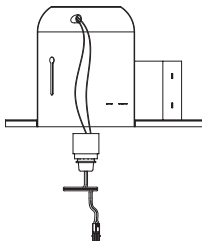

5. Plug E26 base cable connection into the recessed housing. (Fig. 5)


Fig: 5

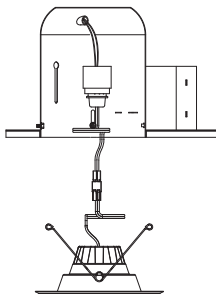

### INSTALLATION INSTRUCTIONS (cont'd)


6. Squeeze torsion springs as shown and install into the metal brackets inside the recessed housing. For proper installation, the torsion springs should be seated within the brackets and on both sides of the housing. (Fig.6)

Fig: 6

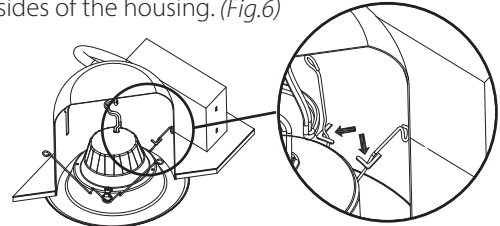



7. Carefully place wires into fixture and push the LED trim into the housing until flush with ceiling. (Fig.7)

Fig: 7

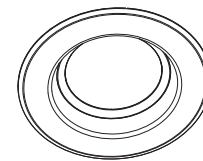

### DIMENSIONAL DRAWINGS

R6R88XX120WS  
R6R89XX120WS  
R6R118XX120WS  
R6R119XX120WS  
R6R148XX120WS  
R6R149XX120WS

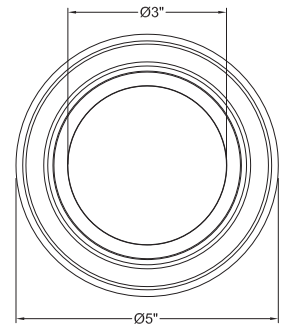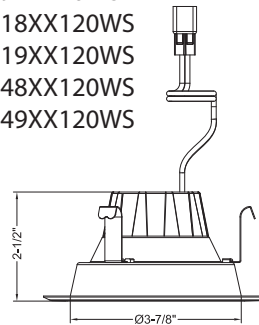

R6R88XX120WB  
R6R89XX120WB  
R6R118XX120WB  
R6R119XX120WB  
R6R148XX120WB  
R6R149XX120WB

