INSTRUCTIONS
A17 ROADWAY ARM INSTALLATION

RAB®
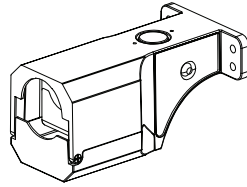
IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.
CAUTION: For proper weatherproof function all gaskets must be seated properly and all screws inserted and tightened firmly.

ROADWAY ARM MOUNTING

1. The **ROADWAY ARM** fits a 1″, 1.25″, 1.5″ and 2″ pole tenon.

2. Unlatch the **Arm Door** and place the appropriate **Pole Mounting Clamp** in the **Roadway Arm**. The tenon diameter is marked on the **Pole Mounting Clamps**. Slide the **Fixture** on the tenon pole while guiding the wires into the **Splice Box**.

3. Secure the **Fixture** on the pole by tightening the **Pole Mounting Clamps** with hardware provided.

4. Open the **Arm Cover Plate** to the **Splice Box**. Feed wires from the pole and **Fixture** into the **Splice Box**. Make necessary connections in the **Splice Box**, knot the wires for strain relief..

5. Install the **Arm Cover Plate**. Be sure the **Gaskets** and **O-Ring** are in place. Tighten **Screws**, install the **Cap** and close the **Arm Door**.
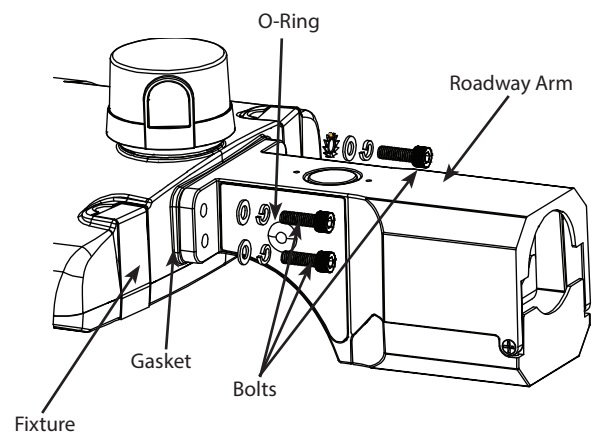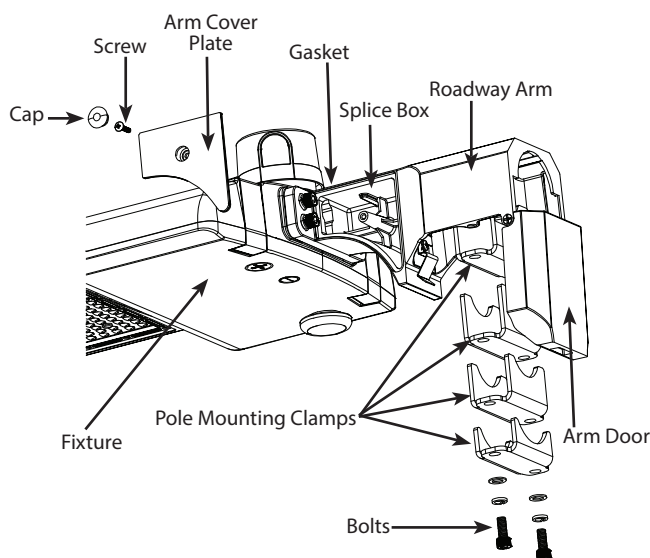
Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.